


For GL only (Blue tooth function)
Change BLE Setting

4th Aug 2023

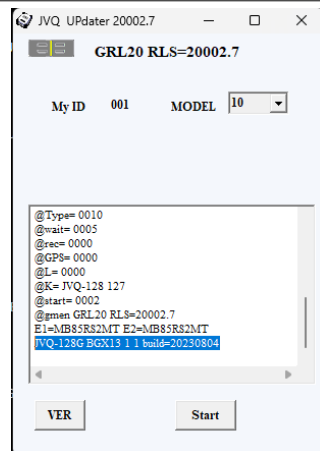


When updater completes to update
it shows as follows
@gmen GRL20 RLS=20002.7
E1=MB85RS2MT E2=MB85RS2MT
JVQ-128G BGX13 1 0 build=20230804

When the last 1line is
JVQ-128G BGX13 x 1 build=20230804
You should not do anymore
x = 0 or 1





Wake BGX commander

BGX commander is distributed by Silicon Lab in APP store or Google Play

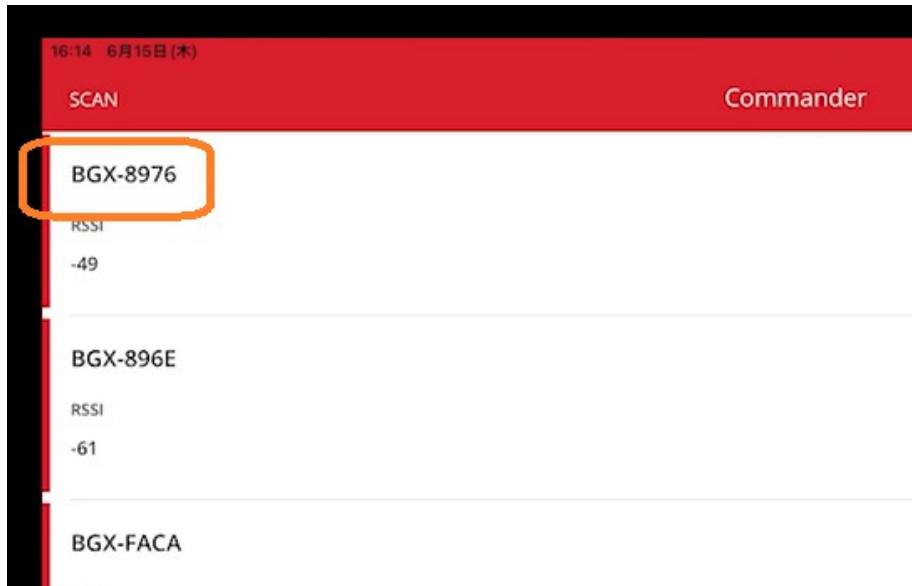

Select your G-men BLE ID

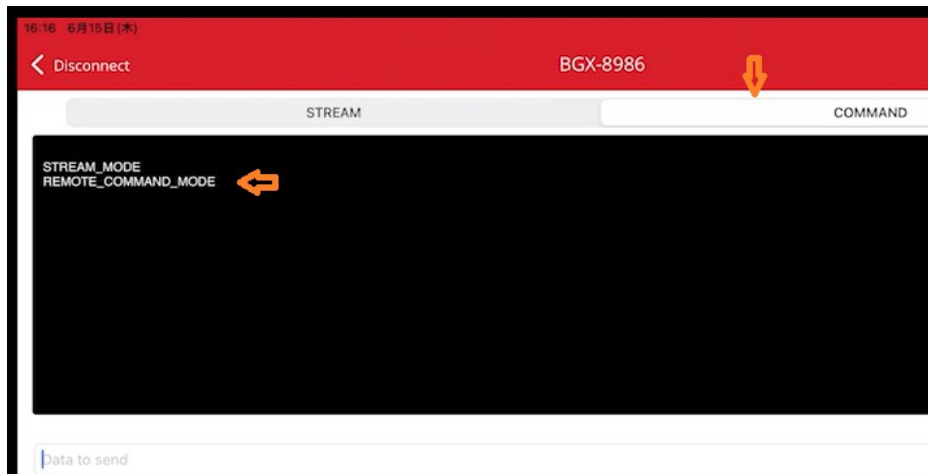

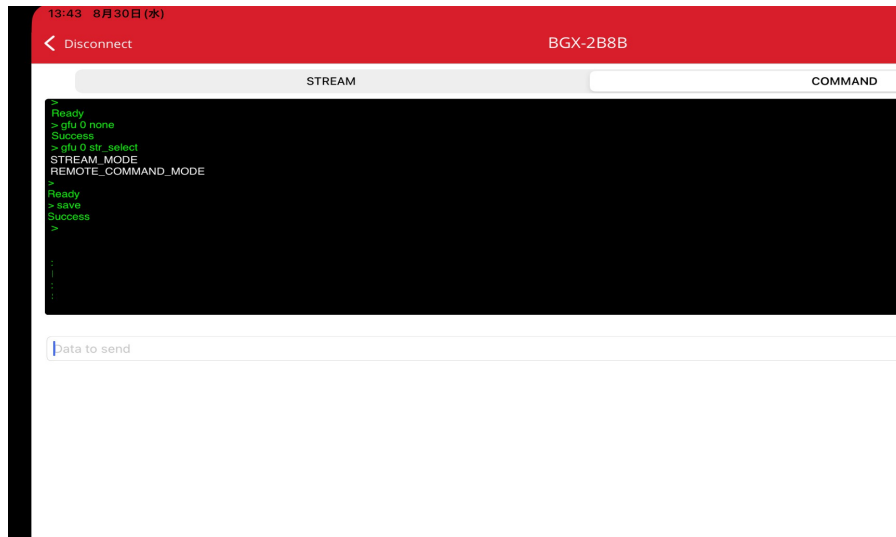


Push Command Tab
REMOTE COMMAND MODE appears

you should type these command lists

```
>gfu 0 none
Success
>gfu 0 str_select
```

It responds
But after “gfu 0 str_select” sent
There is no response

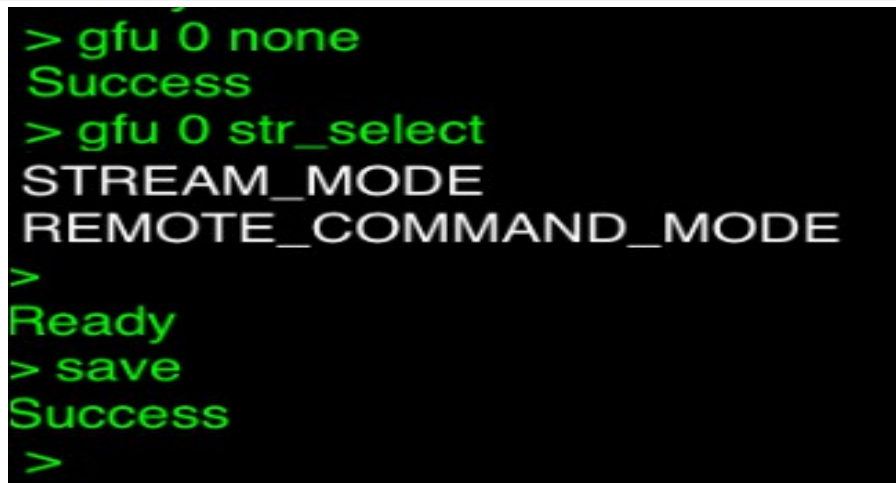


Push command Tab again
And execute two commands

```
>save
Success
>reboot
```

BGX commander is terminated Automatically

The BLE setting is completed

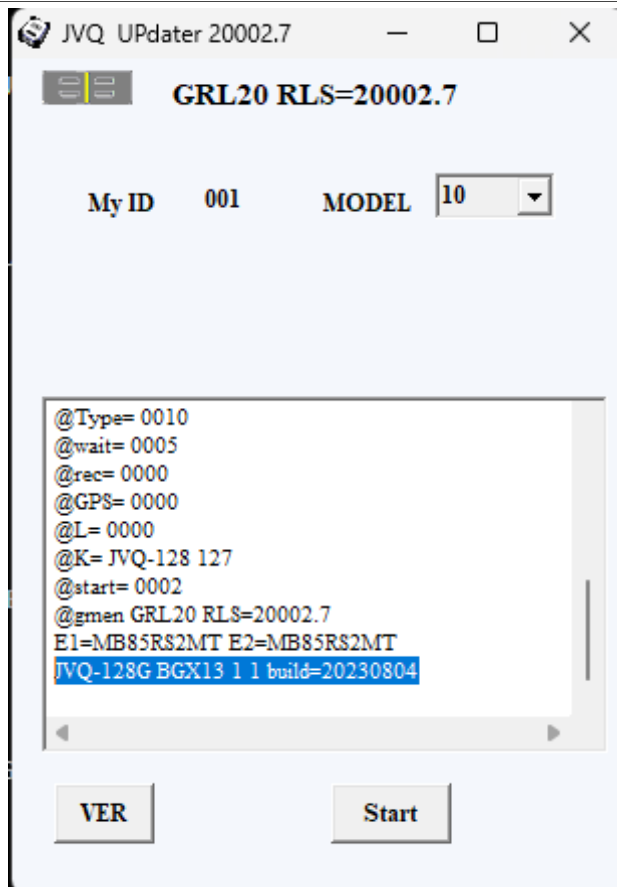

Once you remove Battery from G-MEN and Release USB cable
After you see The Gmen LCD is Blanc
You connect PC and Gmen and Make it sure the last line of display

JVQ-128G BGX13 1 1 build=20230804

You should make it sure the one numeric in front of the build statement
must be one